
Auto-Field Sampler (AFS) ATV & UTV Mounting Instructions

- Warning: The operator is responsible for securely installing the Auto-Field Sampler (AFS) to an ATV or UTV. AMS assumes no liability unless the installation's completed at an AMS facility.
- Mount the AFS using the ATV & UTV Universal Mount and ATV & UTV Mast Mount.
- Temporarily position the ATV & UTV Mast Mount and Mast at the desired mounting location to determine proper height and placement.
 - Note: Position the AFS as close to the side of the ATV or UTV as possible to maintain balance and minimize sagging. The bottom of the Mast should be 6 in. (15.24 cm) above ground level. Improper height will result in incomplete (less than 12 in. (30.48 cm)) sampling.
- Once the position's confirmed, align the ATV & UTV Universal Mount beneath the ATV or UTV's frame at the selected location. Remove the ATV & UTV Mast Mount and Mast for access.
- Secure the ATV & UTV Universal Mount to the structural frame using appropriate hardware. See Figure 6.1.1 A.
 - Note: Installation may require drilling or welding. Use a minimum bolt diameter of 3/8 in.

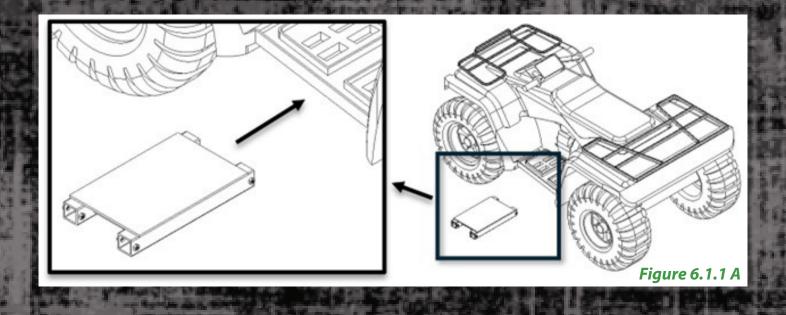



Agricultural Geotechnical **Environmental** Groundwater



105 Harrison St. American Falls, ID 83211



Toll Free: 800-635-7330 Office: 208-226-2017



 
ams@ams-samplers.com



 
facebook.com/amssampling




instagram.com/amsinc









Slide the ATV & UTV Mast Mount into the receiver tubes on the installed ATV & UTV Universal
Mount. See Figure 6.1.1 B.

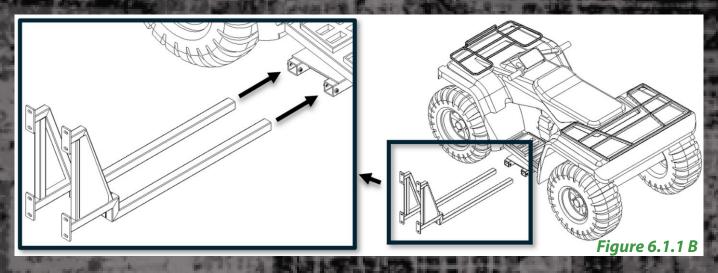


 Secure the ATV & UTV Mast Mount using eight 3/8 in. diameter bolts. You may use the pre-welded nuts or drill new holes as needed. See Figure 6.1.1 C.

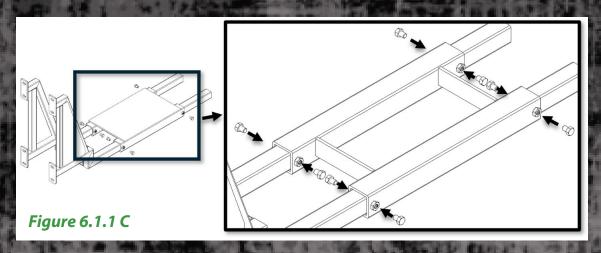


Attach the *Mast* to the ATV & UTV Mast Mount using the flanged bolt holes. See Figure 6.1.1 D.

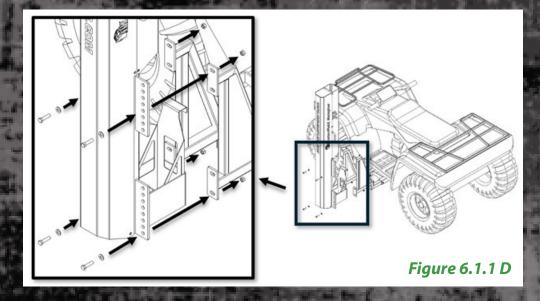

- Adjust the height using the flanged bolt holes. Maintain a 6 in. (15.24 cm) height from the ground to the bottom of the *Mast* to ensure a full 12 in. (30.48 cm) sample.
 - Note: The Mast mounting flanges include eight bolt holes; however, only four are necessary to properly secure the Mast. Use four 3/8 in. bolts—two in the top flange, two in the bottom flange.
- Mount the Power Unit securely in the bed or rear cargo area of the ATV or UTV.
 See Figure 6.1.1 E.

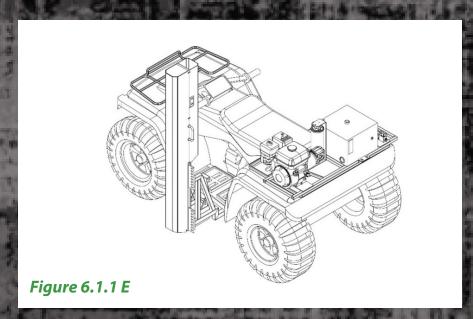

Connect the hydraulic hoses—A to A, B to B—as shown in *Figure 6.1.3 F*.

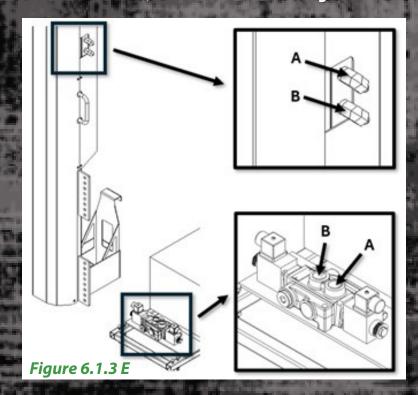

• Connect the *Power Unit* to a 12V power source using the included 10 ft. (3.05 m) bare-wire extension. Trim to length as needed. Battery terminals are provided; accessory connectors aren't included.